

 


GAME BOARD



SETUP FOR ***SERIAL ELA***


1. Start by checking if the machine is fully configured and running.
2. Turn the machine off.
3. Connect all cables from the ***Serial ELA*** to the ***Game Board***.

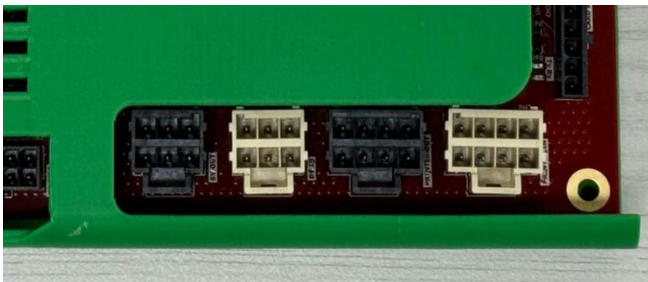


4. Power up both **Game Board** and **Serial ELA**.

5. If the machine shows a "**Printer Error**":

- Identify the printer cable that goes from the **Serial ELA** to the **Game Board**.
- Make sure that **pins 6 and 7** are shorted on the DB9 end.
(*This is required by the game board*).

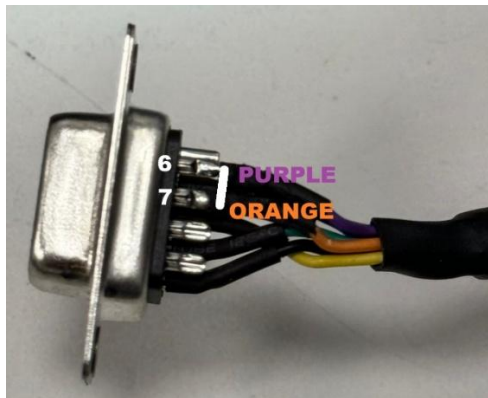


c. Check the configuration on Game Board Menu

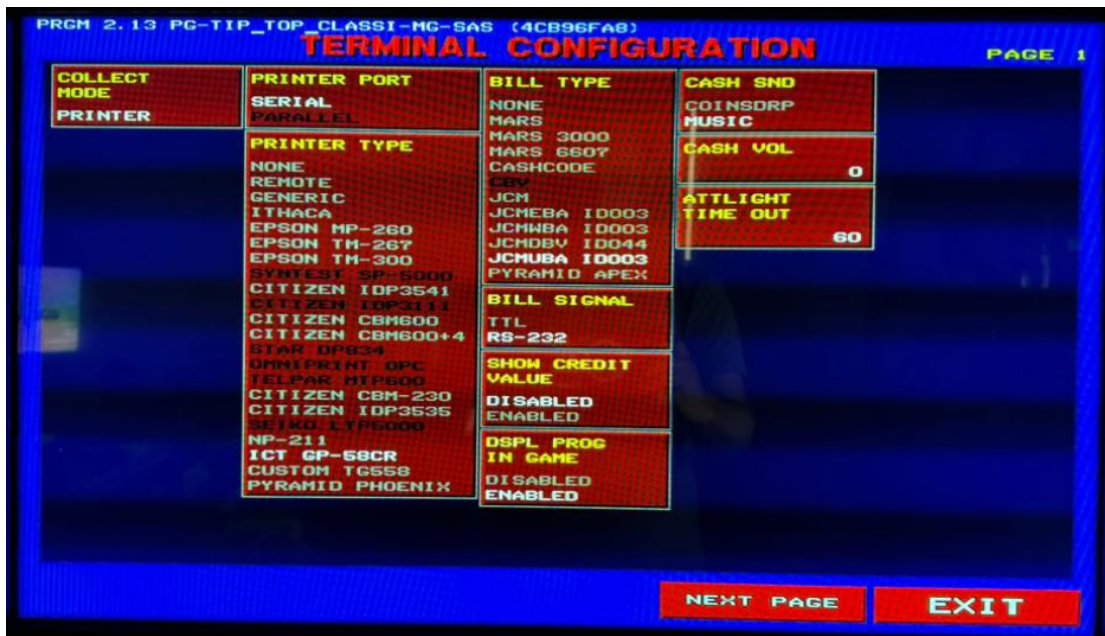

Printer Port – **Serial** / Printer Type – **ICT GP-58CR**

Bill Type – **JCMUBA ID003** / Bill Signal – **RS-232**

d. Confirm the following settings on the EasyLinx system
ELA Configuration menu

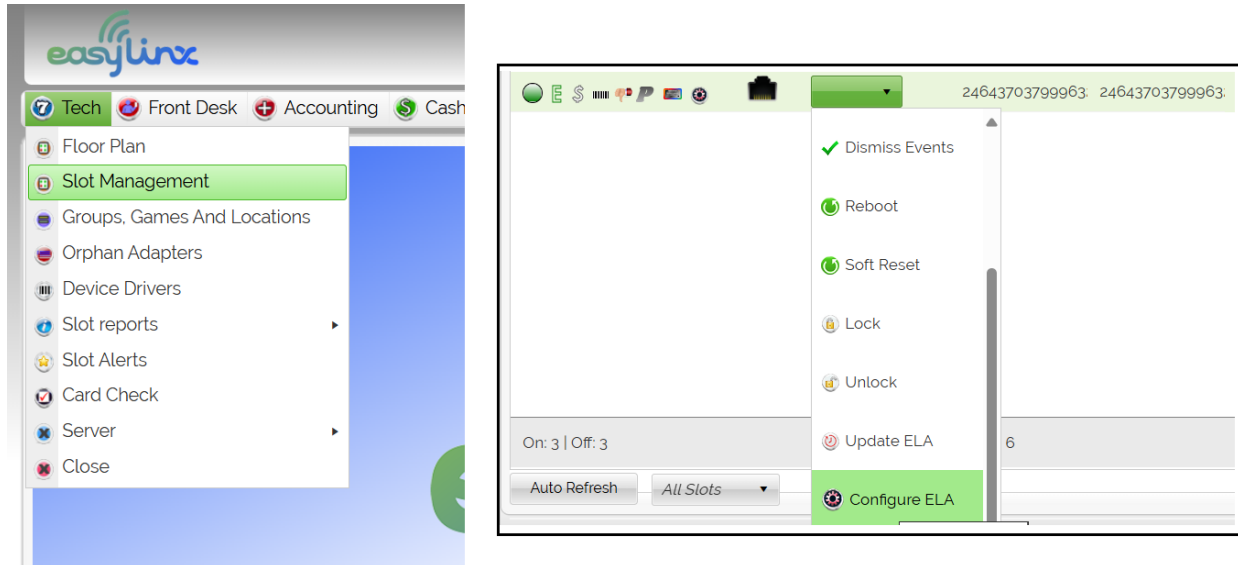

Configure Serial ELA:
246437037999632

Printer

Printer In (to game) ICT 58CR - POG (ESC/POS 24... Default: ICT 58CR (38400)

Printer Out (device) Default Default: GEN2/3/5 Paycheck (9600)

BV

BV In Type (to game) Default Default: JCM iVision

BV Out (device) Default Default: JCM ID003/NV200 IF003

BV Out Options ☐ Reject Bills

Save

**Note: “Printer in (game board)” should be selected
- ICT 58CR – POG (ESC/POS 2400)**

If other devices like Bill Acceptors or Printers are being used, simply select the correct ones in the corresponding drop-down boxes to each device.

After all steps have been completed:

- Clear any error that might be on the screen.
- Go back to the game screen.
- Attempt a cash in and cash out.
- Have fun!

If you have any questions, please do not hesitate to contact the  support team.

Thank you!